



MODEL: ST3151A04-1

Ver. 1.2

Date: 04.Jan.2012

Customer's Approval		CSOT	
Signature	Date	Approved By Product Director	Date
		Name: Richard Lung	
		Signature:	
Signature	Date	Reviewed By PM Manager	Date
		Name: Aaron Tu	
		Signature:	
Signature	Date	Reviewed By Project Leader	Date
		Name: Joe Kuo	
		Signature:	
Signature	Date	Reviewed By PM	Date
		Name: Charles Chin	
		Signature:	

Contents

Revision History	3
1. General Description	4
1.1 Product Features	4
1.2 Overview	4
1.3 General Information	4
2. Electrical Specification	5
2.1 Open cell Power Consumption ($TA = 25 \pm 2 \text{ }^{\circ}\text{C}$)	5
2.2 LVDS Characteristics	6
3. Input Terminal Pin Assignment	7
3.1 Interface pin assignment	7
3.2 Block Diagram of Interface	8
3.3 LVDS Interface	8
3.3.1 VESA Format (SELLVDS = L or Open)	8
3.3.2 JEIDA Format (SELLVDS = H)	8
4. Interface Timing	10
4.1 Timing Table (DE Only Mode)	10
4.2 Power On/Off Sequence	11
5. Optical Characteristics	12
5.1 Measurement Conditions	12
5.2 Optical Specifications	13
6. Mechanical Characteristics	16
6.1 Mechanical Specification	16
6.2 Packing	17
6.2.1 Packing Specifications	17
6.2.2 Packing Method	17
7. Definition of Labels	18
7.1 Open Cell Label	18
7.2 Carton Label	18
7.3 Pallet Label	19
8. Precautions	20
8.1 Assembly and Handling Precautions	20
8.2 Safety Precautions	20

Revision History

Version	Date	Page (New)	Section	Description	Revision by
Ver. 1.1	14.Nov.2011	20	All	Tentative Specification was First Issued.	Charles Chin
Ver 1.2	4.Jan.2012	5	2.1	Power Supply Voltage min and max value fixed	Charles Chin
		10	4.1	Power Supply Current modify Frame Rate min and max value fixed	

CSOT
Confidential

1. General Description

1.1 Product Features

- HD Resolution (1366 x 768)
- Very High Contrast Ratio: 4000:1
- Fast Response Time
- Ultra Wide Viewing Angle: 178° (H)/178° (V) (CR ≥ 10)
- DE (Data Enable) Mode
- LVDS (Low Voltage Differential Signaling) Interface

1.2 Overview

ST3151A04-1 is a diagonal 31.5" color active matrix LCD Open cell with 1ch-LVDS interface. This Open cell is a transmissive type display operating in the normally black mode. It supports 1366 x 768 HD resolution and can display up to 16.7M colors (8-bit). Each pixel is divided into Red, Green and Blue sub-pixels which are arranged in vertical stripe. There is no backlight built-in.

This open cell dedicates for LCD TV products and provides excellent performance which includes high transparency, ultra wide viewing angle and high color depth. CSOT open cell comply with RoHS for identification.

1.3 General Information

Item	Specification	Unit	Note
Active Area	697.6845 (H) x 392.2560 (V)	mm	
Cell Size	714.835(H) x 410.570 (V) x 1.900 (D)	mm	
Weight	1.2	kg	Max.
Driving Scheme	a-Si TFT Active Matrix	-	
Number of Pixels	1366 x 768	pixel	
Pixel Pitch (Sub Pixel)	0.17025 (H) x 0.51075 (V)	mm	
Pixel Arrangement	RGB Vertical Stripe	-	
Display Colors	16.7 M	color	8-bit
Display Mode	Transmissive Mode, Normally Black	-	
Glass thickness (Array/CF)	0.7/0.7	mm	
Color Chromaticity	R=0.638, 0.335 G=0.323, 0.621 B=0.156, 0.054 W=0.280, 0.290		Typical value measured at CSOT's module: MT3151A04-1
Contrast Ratio	4000:1(Typ.)		
Cell Transmittance	6.75%(Typ.)	%	
View Angle(CR>10)	+89/-89(H),+89/-89(V) (Typ.)		
Polarizer(CF side)	Anti-glare, Haze 12%, Hard Coating (3H)		
Polarizer(TFT side)	Hard Coating (3H)		

2. Electrical Specification

2.1 Open cell Power Consumption (TA = 25 ± 2 °C)

Parameter		Symbol	Value			Unit	Note
			Min.	Typ.	Max.		
Power Supply Voltage		V _{CC}	10.8	12.0	13.2	V	(1)
Rush Current		I _{RUSH}	-	-	3	A	(2)
Power Supply Current	White Pattern	I _{CC}	-	0.30	0.36	A	(3)
	Horizontal Stripe	I _{CC}	-	0.27	0.32	A	
	Black Pattern	I _{CC}	-	0.18	0.21	A	

Note:

- (1) The ripple voltage should be controlled less than 10% of V_{CC}.
(2) Measurement condition: V_{CC} rising time = 470 μs.

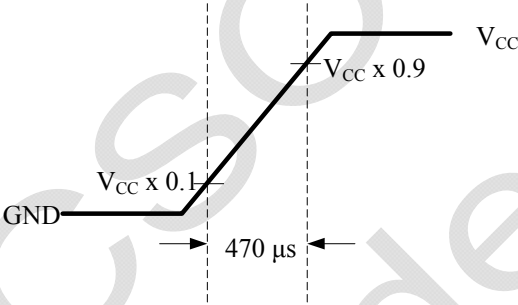


Fig. 2.1 V_{CC} rising time condition

- (3) Measurement condition: V_{CC} = 12 V, Ta = 25 ± 2 °C, F = 60 Hz. The test patterns are shown as below.

A. White Pattern



C. Black Pattern



B. Horizontal Pattern

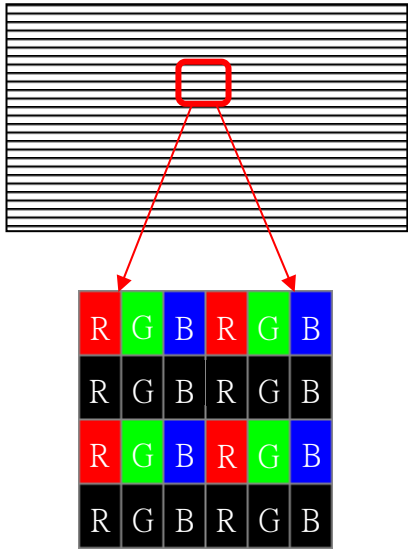


Fig. 2.2 Test patterns

2.2 LVDS Characteristics

Parameter		Symbol	Value			Unit	Note
			Min.	Typ.	Max.		
LVDS Interface	Differential Input High Threshold Voltage	V_{TH}	+ 100	-	-	mV	(1)
	Differential Input Low Threshold Voltage	V_{TL}	-	-	- 100	mV	
	Common Input Voltage	V_{CM}	1.0	1.2	1.4	V	
	Differential Input Voltage	$ V_{ID} $	200	-	600	mV	
	Terminating Resistor	R_T	-	100	-	ohm	
CMOS Interface	Input High Threshold Voltage	V_{IH}	2.7	-	3.3	V	
	Input Low Threshold Voltage	V_{IL}	0.0	-	0.6	V	

Note:

(1) The LVDS input signal has been defined as follows:

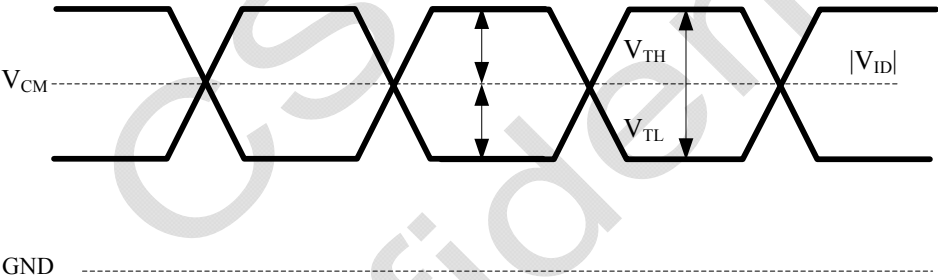


Fig. 2.3 LVDS input signal

3. Input Terminal Pin Assignment

3.1 Interface pin assignment

CN1: 300B30-0000RA-M4 (STARCONN) or equivalent (see Note (1))

Pin No.	Symbol	Description	Note
1	V _{CC}	Power Supply ,+ 12 V DC Regulated	
2	V _{CC}	Power Supply ,+ 12 V DC Regulated	
3	V _{CC}	Power Supply ,+ 12 V DC Regulated	
4	V _{CC}	Power Supply ,+ 12 V DC Regulated	
5	GND	Ground	
6	GND	Ground	
7	GND	Ground	
8	GND	Ground	
9	LVDS SEL	LVDS Data Format Selection	(2)
10	NC	For CSOT Users Only	
11	GND	Ground	
12	LV1N0	1st Channel LVDS Data Input (0-)	
13	LV1P0	1st Channel LVDS Data Input (0+)	
14	GND	Ground	
15	LV1N1	1st Channel LVDS Data Input (1-)	
16	LV1P1	1st Channel LVDS Data Input (1+)	
17	GND	Ground	
18	LV1N2	1st Channel LVDS Data Input (2-)	
19	LV1P2	1st Channel LVDS Data Input (2+)	
20	GND	Ground	
21	LVCK1N	1st Channel LVDS Clock Input (-)	
22	LVCK1P	1st Channel LVDS Clock Input (+)	
23	GND	Ground	
24	LV1N3	1st Channel LVDS Data Input (3-)	
25	LV1P3	1st Channel LVDS Data Input (3+)	
26	GND	Ground	
27	NC	For CSOT Users Only	(3)
28	NC	For CSOT Users Only	(3)
29	NC	For CSOT Users Only	(3)
30	GND	Ground	

Note:

(1) The direction of pin assignment is shown as below:


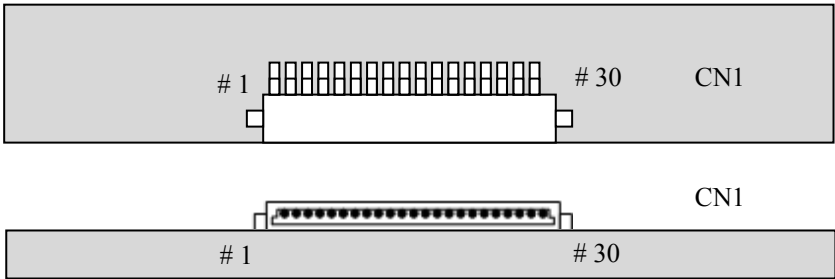


Fig. 3.1 LVDS direction sketch map

(2) High: connect to +3.3 V → JEIDA format; Low: connect to GND or Open → VESA format.

(3) For CSOT internal only, please let it open.

3.2 Block Diagram of Interface

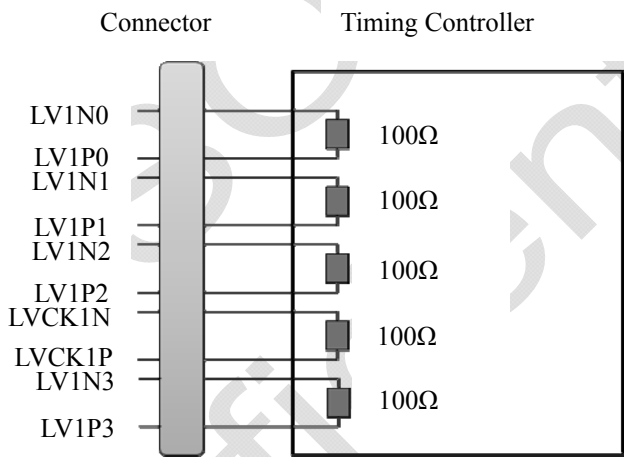


Attention:


- (1) This Open cell uses a 100 ohms (Ω) resistor between positive and negative lines of each receiver input.
- (2) LVDS cable impedance shall be 50 ohms per signal line or about 100 ohms per twist-pair line respectively.

3.3 LVDS Interface

3.3.1 VESA Format (SELLVDS = L or Open)

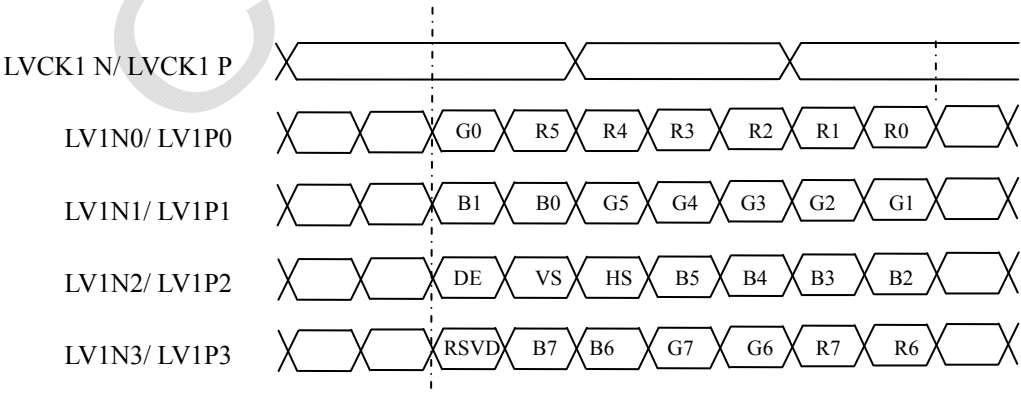


3.3.2 JEIDA Format (SELLVDS = H)

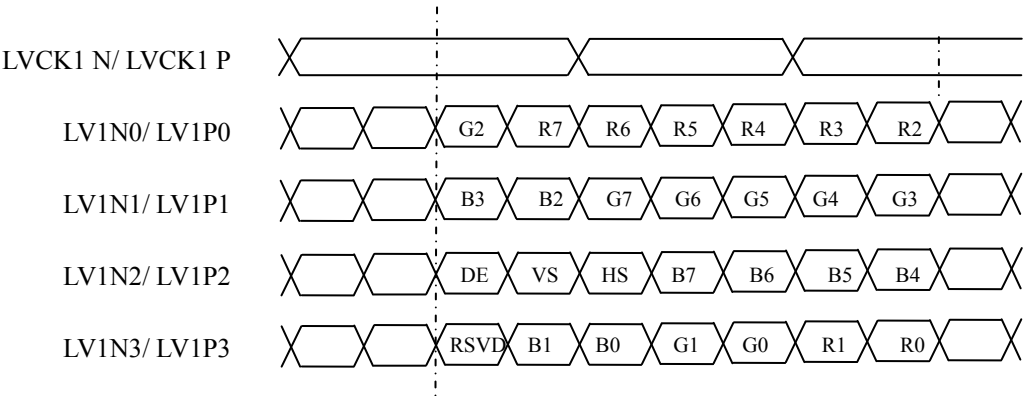

3.4 Pattern FOR Vcom Adjustment

2 line-inversion pattern (2n+1)

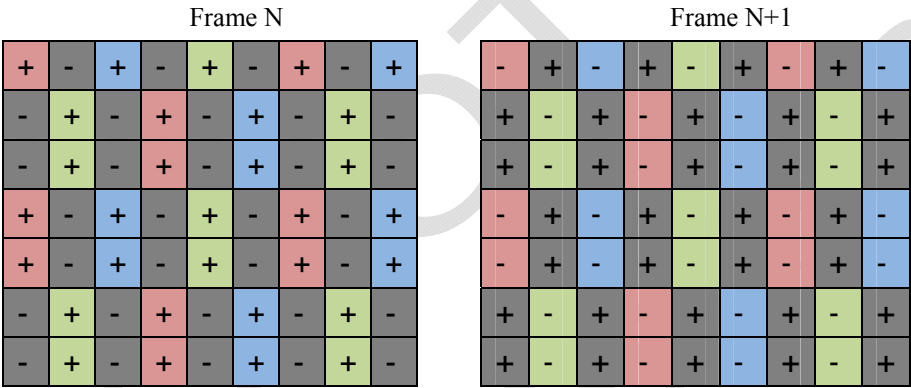

4. Interface Timing

4.1 Timing Table (DE Only Mode)

Signal	Item	Symbol	Min.	Typ.	Max.	Unit	Note
LVDS Clock	Frequency	F_{clk} ($= 1 / T_{clk}$)	50.0	75.4	85.0	MHz	
Vertical Term	Frame Rate	F	57	60	63	Hz	
	Vertical Frequency	F_v	47.0	48.4	60.9	KHz	
	Total	T_v	784	806	1015	T_h	$T_v = T_{vd} + T_{vb}$
	Display	T_{vd}	768				
	Blank	T_{vb}	16	38	247	T_h	
Horizontal Term	Total	T_h	1460	1560	2000	T_{clk}	$T_h = T_{hd} + T_{hb}$
	Display	T_{hd}	1366				
	Blank	T_{hb}	94	194	634	T_{clk}	

Attention:

(1) The TFT LCD Open cell is operated in DE only mode, H sync and V sync input signal have no effect on normal operation.

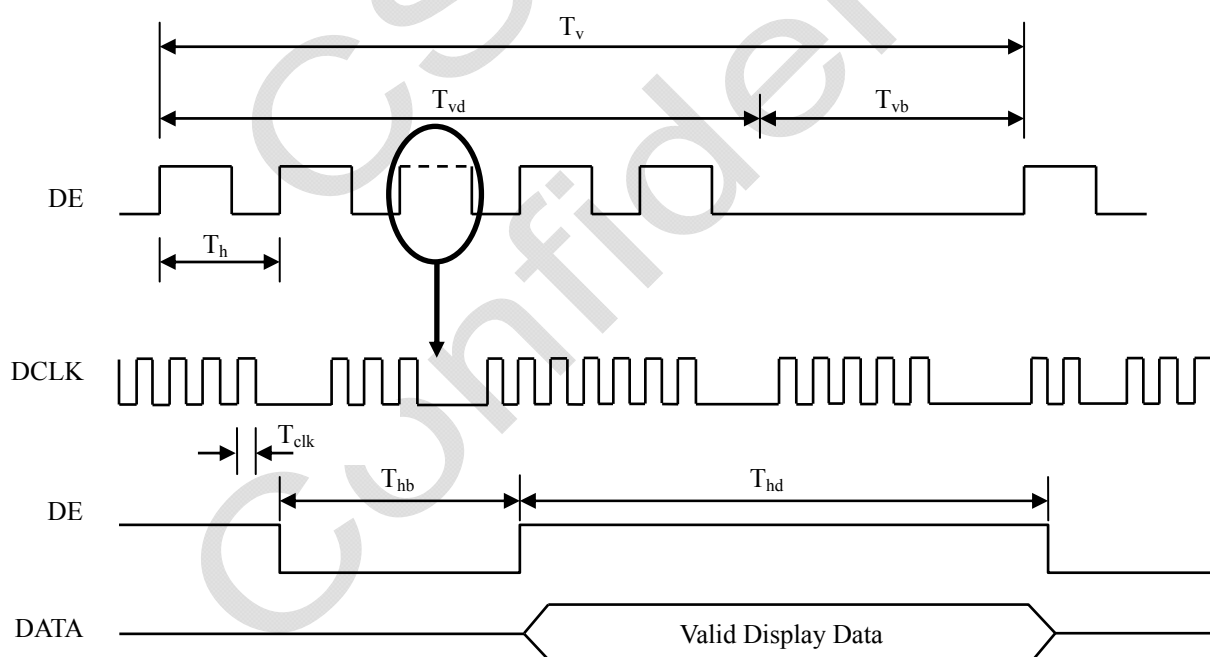


Fig. 4.1 Interface signal timing diagram

4.2 Power On/Off Sequence

To prevent a latch-up or DC operation of the Open cell, the power on/off sequence should be as the diagram below.

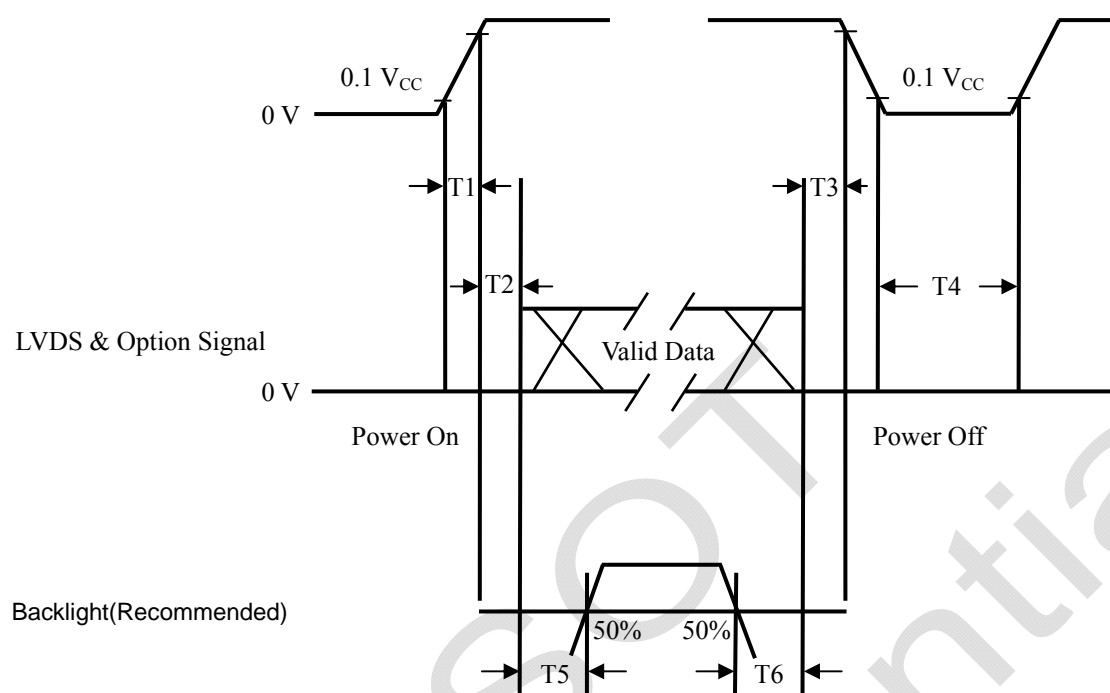


Fig. 4.2 Power On/Off

Parameter	Values			Unit
	Min.	Typ.	Max.	
T1	0.5	-	10	ms
T2	0	-	50	ms
T3	0	-	50	ms
T4	1000	-	-	ms
T5	500	-	-	ms
T6	100	-	-	ms

Attention:

- (1) The supply voltage of the external system for the open cell input should follow the definition of V_{CC}.
- (2) When the customer's backlight turns on before the LCD operation or the LCD turns off before the backlight turns off, the display may momentarily become abnormal screen.
- (3) In case that V_{CC} is in off level, please keep the level of input signals on the low or high impedance. If T2 < 0, that may cause electrical overstress.
- (4) T4 should be measured after the module has been fully discharged between power off and on period.
- (5) Interface signal shall not be kept at high impedance when the power is on.

5. Optical Characteristics

5.1 Measurement Conditions

The table below is the test condition of optical measurement.

Item	Symbol	Value	Unit
Ambient Temperature	T _A	25 ± 2	°C
Ambient Humidity	H _A	50 ± 10	% RH
Supply Voltage	V _{CC}	12	V
Driving Signal	Refer to the typical value in Chapter 2: Electrical Specification		
Vertical Refresh Rate	F _R	60	Hz

To avoid abrupt temperature change during optical measurement, it's suggested to warm up the LCD module more than 45 minutes after lighting the backlight and in the windless environment.

To measure the LCD cell, it is suggested to set up the standard measurement system as Fig. 5.1. The measuring area S should contain at least 500 pixels of the LCD cell as illustrated in Fig.5.2 (A means the area allocated to one pixel). In this model, for example, the minimum measuring distance Z is 370 mm when θ is 2 degree. Hence, 500 mm is the typical measuring distance. This measuring condition is referred to 301-2H of VESA FPDm 2.0 about viewing distance, angle, and angular field of view definition.

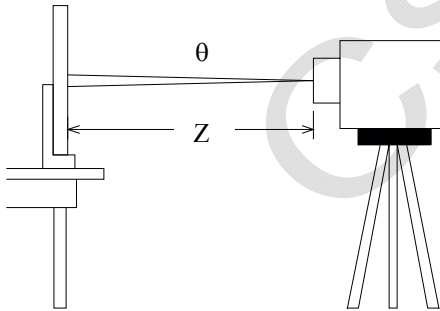


Fig. 5.1 The standard set-up system of measurement

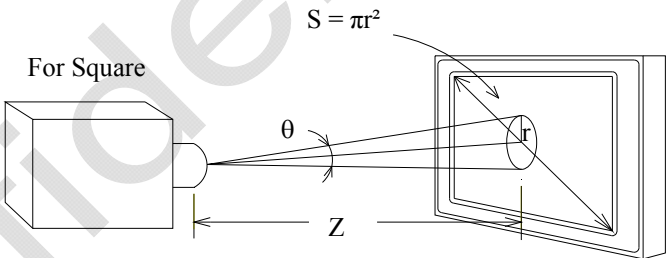


Fig. 5.2 The area S contains at least 500 pixels to be measured

$$N = \frac{S}{A} \geq 500\text{pixels}$$

N means the actual number of the pixels in the area S.

5.2 Optical Specifications

The table below of optical characteristics is measured by MINOLTA CS2000, MINOLTA CA310, ELDIM OPTI Scope-SA and ELDIM EZ Contrast in dark room.

Item		Symbol	Condition	Min.	Typ.	Max.	Unit	Note
Static Contrast Ratio		CR	$\theta_H = 0^\circ, \theta_V = 0^\circ$ Normal direction at center point with CSOT Module	-	4000	-	-	(1) (2)
Response Time		T_L		-	6.5	12	ms	(3)
Center Transmittance		$T\%$		-	6.75		%	(2) (4)
Color Chromaticity (CIE1931)	Red	R_X		Typ. - 0.03	0.638	Typ. + 0.03	-	(2) (5)
		R_Y			0.335		-	
	Green	G_X			0.323		-	
		G_Y			0.621		-	
	Blue	B_X			0.156		-	
		B_Y			0.054		-	
	White	W_X			0.280		-	
		W_Y			0.290		-	
	Color Gamut	CG		68	72	-	% NTSC	
Viewing Angle	Horizontal	θ_{H+}	$CR \geq 10$	-	89	-	Deg.	(6)
		θ_{H-}		-	89	-		
	Vertical	θ_{V+}		-	89	-		
		θ_{V-}		-	89	-		

Note:

(1) Definition of static contrast ratio (CR):

It's necessary to switch off all the dynamic and dimming function when measuring the static contrast ratio.

$$\text{Static Contrast Ratio (CR)} = \frac{\text{CR-W}}{\text{CR-D}}$$

CR-W is the luminance measured by LMD (light-measuring device) at the center point of the LCD module with full-screen displaying white. The standard setup of measurement is illustrated in Fig. 5.3; CR-D is the luminance measured by LMD at the center point of the LCD module with full-screen displaying black. The LMD in this item is CS2000.

(2) The LMD in the item could be a spectroradiometer such as (KONICA MINOLTA) CS2000, CS1000(TOPCON), SR-UL2 or the same level spectroradiometer. Other display color analyzer (KONICA MINOLTA) CA210, CA310 or (TOPCON) BM-7 could be involved after being calibrated with a spectroradiometer on each stage of a product.

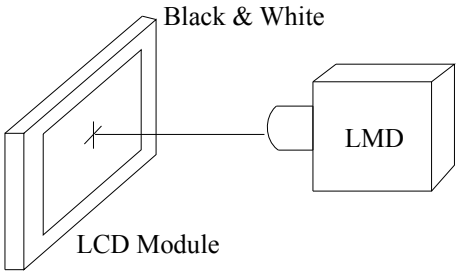


Fig. 5.3 The standard setup of CR measurement

(3) Response time T_L is defined as the average transition time in the response time matrix. The table below is the response time matrix in which each element $t_{X \text{ to } Y}$ is the transition time from luminance ratio X to Y . X and Y are two different luminance ratios among 0%, 25%, 50%, 75%, and 100% luminance. The transition time $t_{X \text{ to } Y}$ is defined as the time taken from 10% to 90% of the luminance difference between X and Y ($X < Y$) as illustrated in Fig.6.4. When $X > Y$, the definition of $t_{X \text{ to } Y}$ is the time taken from 90% to 10% of the luminance difference between X and Y . The response time is optimized on refresh rate $F_r = 60\text{Hz}$.

Measured Transition Time		Luminance Ratio of Previous Frame				
		0%	25%	50%	75%	100%
Luminance Ratio of Current Frame	0%		$t_{25\% \text{ to } 0\%}$	$t_{50\% \text{ to } 0\%}$	$t_{75\% \text{ to } 0\%}$	$t_{100\% \text{ to } 0\%}$
	25%	$t_{0\% \text{ to } 25\%}$		$t_{50\% \text{ to } 25\%}$	$t_{75\% \text{ to } 25\%}$	$t_{100\% \text{ to } 25\%}$
	50%	$t_{0\% \text{ to } 50\%}$	$t_{25\% \text{ to } 50\%}$		$t_{75\% \text{ to } 50\%}$	$t_{100\% \text{ to } 50\%}$
	75%	$t_{0\% \text{ to } 75\%}$	$t_{25\% \text{ to } 75\%}$	$t_{50\% \text{ to } 75\%}$		$t_{100\% \text{ to } 75\%}$
	100%	$t_{0\% \text{ to } 100\%}$	$t_{25\% \text{ to } 100\%}$	$t_{50\% \text{ to } 100\%}$	$t_{75\% \text{ to } 100\%}$	

$t_{X \text{ to } Y}$ means the transition time from luminance ratio X to Y .

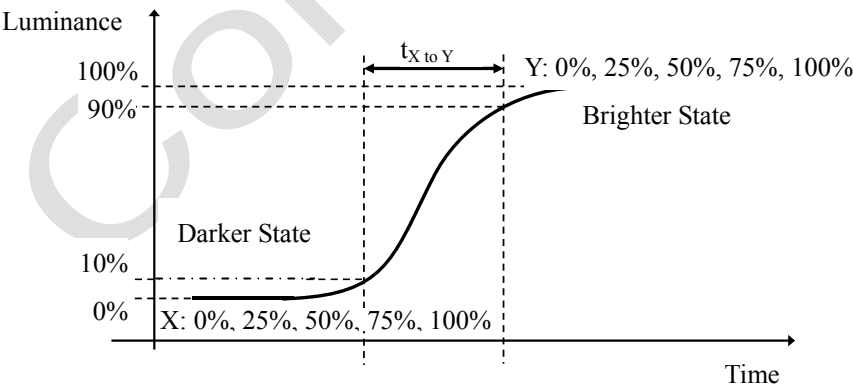


Fig. 5.4 The definition of $t_{X \text{ to } Y}$

All the transition time is measured at the center point of the LCD module by ELDIM OPTI Scope-SA.

(4) Definition of center Transmittance (T%):

The transmittance is measured with full white pattern (Gray 255)

$$\text{Static Contrast Ratio (CR)} = \frac{\text{Luminance of LCD module}}{\text{Luminance of Backlight}}$$

(5) Definition of color chromaticity:

Each chromaticity coordinates (x, y) are measured in CIE1931 color space when full-screen displaying primary color R, G, B and white. The color gamut is defined as the fraction in percent of the area of the triangle bounded by R, G, B coordinates and the area is defined by NTSC 1953 color standard in the CIE color space. Chromaticity coordinates are measured by CS2000 and the standard setup of measurement is shown in Fig. 5.7.

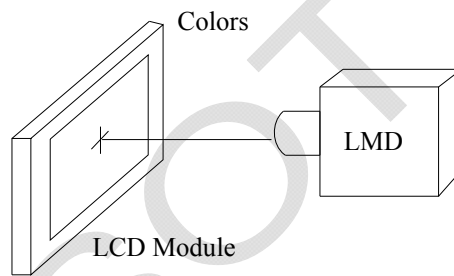


Fig. 5.5 The standard setup of color chromaticity measurement

(6) Definition of viewing angle coordinate system (θ_H , θ_V):

The contrast ratio is measured at the center point of the LCD module. The viewing angles are defined at the angle that the contrast ratio is larger than 10 at four directions relative to the perpendicular direction of the LCD module (two vertical angles: up θ_{V+} and down θ_{V-} ; and two horizontal angles: right θ_{H+} and left θ_{H-}) as illustrated in Fig. 5.8. The contrast ratio is measured by ELDIM EZ Contrast.

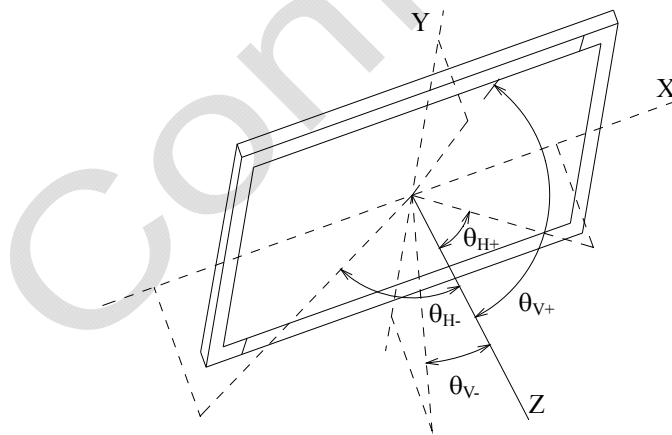



Fig. 5.6 Viewing angle coordination system

6.2 Packing

6.2.1 Packing Specifications

Item	Specification		
	Quantity	Dimension (mm)	Weight (kg)
Packing Box	24 pcs / box	923.00 (L) x 663.00 (W) x 252.00 (H)	Net Weight: 28.20 (Max.) Gross Weight: 40.00 (Max.)
Pallet	1	1420.00 (L) x 1120.00 (W) x 150.00 (H)	Net Weight: 33
Stack Layer	5		
Boxes per Pallet	10 boxes / pallet		
Pallet after Packing	240 pcs / pallet	240 pcs / pallet	240 pcs / pallet

6.2.2 Packing Method

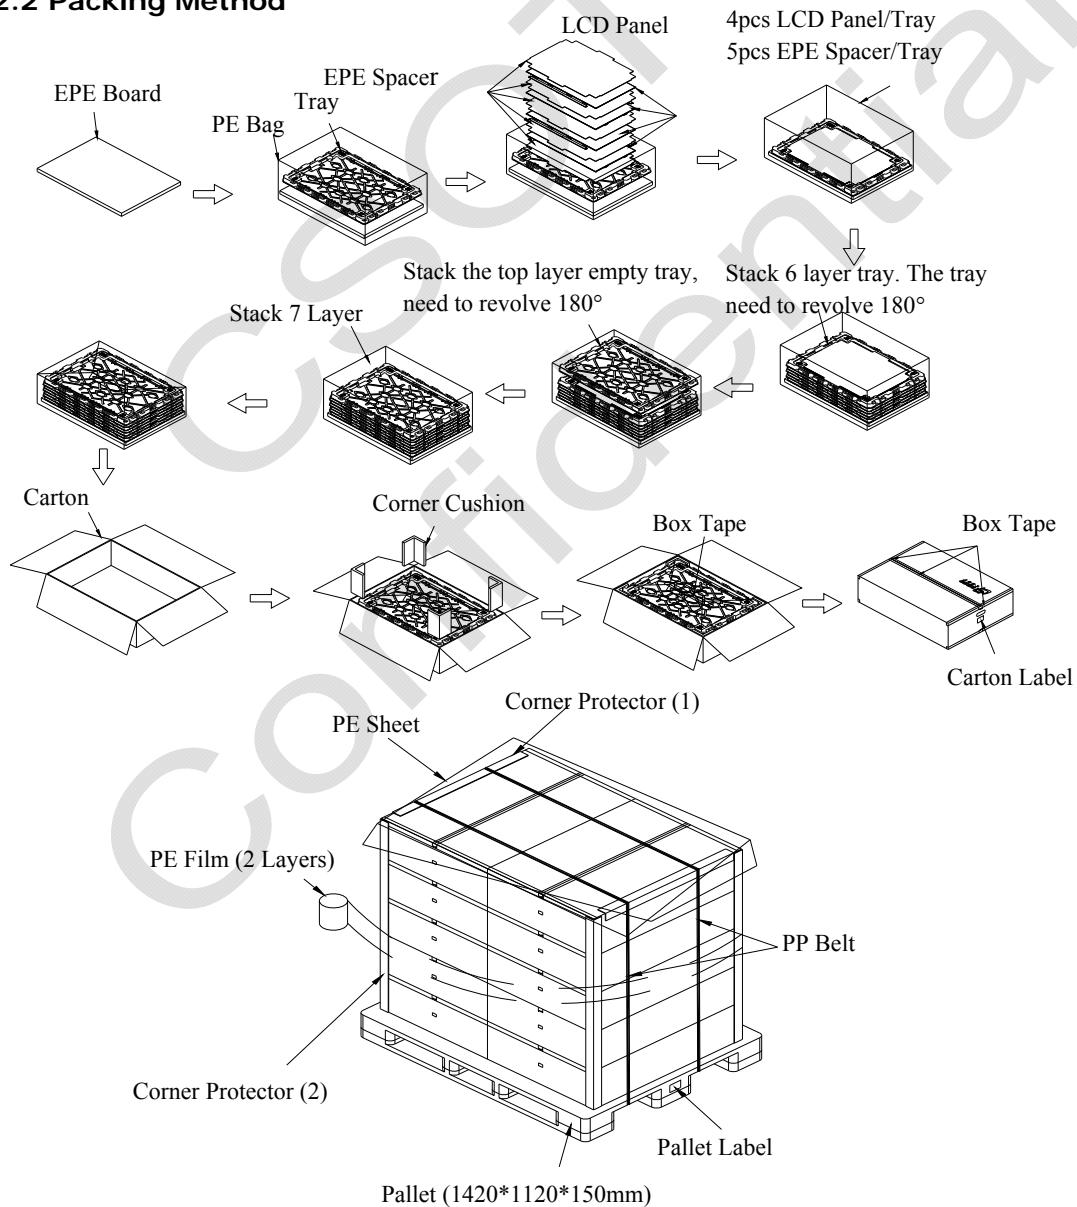

7. Definition of Labels

7.1 Open Cell Label




For RoHS compatible products, CSOT will add RoHS for identification.

Model Name: ST3151A04-1

Ver.X.X: Version, for example: 0.1, 0.2, ... , 1.1, 1.2, ..., 2.1, 2.2, ...


WC (Week Code): XX XX




Year: 2010 = 10, 2011 = 11 ... 2020 = 20, 2021 = 21...

Week: 01, 02, 03 ...


Serial Number: XXXXXXXXXXXXXX XXXXXXXXXX



7.2 Carton Label

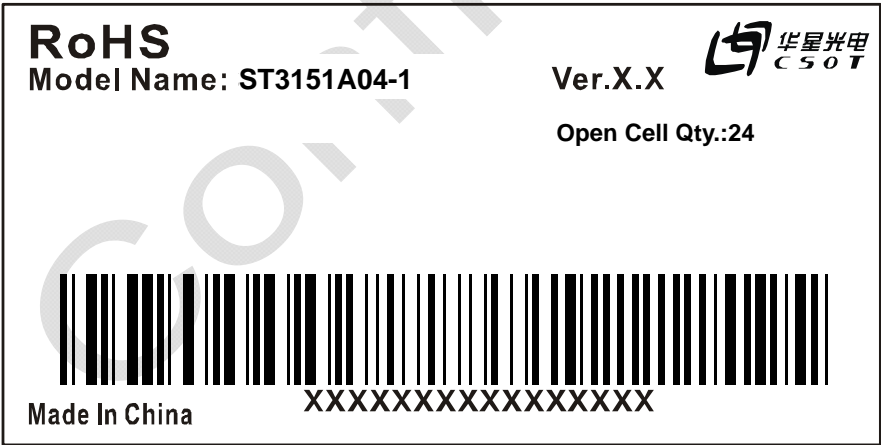

Serial Number: XXXX XX XXXXXX XXXXXX

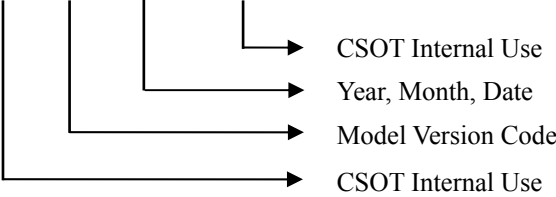

Manufactured Date:



Year: 2010 = 10, 2011 = 11...2020 = 20, 2021 = 21...

Month: 1~9, A~C, for Jan. ~ Dec.

Date: 01~31, for 1st to 31st

Model Version Code: Version of product, for example: 01, 02, 11, 12...

7.3 Pallet Label

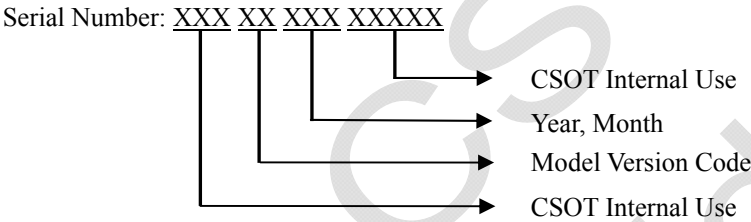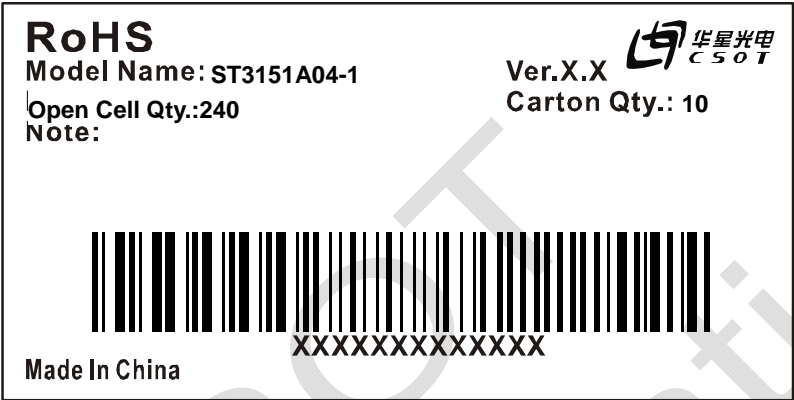

8. Precautions

8.1 Assembly and Handling Precautions

- (1) Do not apply rough force such as bending or twisting to the open cell during assembly.
- (2) It is recommended to assemble or install a open cell into the user's system in clean working areas. The dust and oil may cause electrical short or damage the polarizer.
- (3) Do not apply pressure or impulse to the open cell to prevent the damage to the open cell.
- (4) Always follow the correct power-on sequence. This can prevent the damage and latch-up to the LSI chips.
- (5) Do not plug in or pull out the interface connector while the open cell is in operation.
- (6) Use soft dry cloth without chemicals for cleaning because the surface of polarizer is very soft and easily be scratched.
- (7) Moisture can easily penetrate into the open cell and may cause the damage during operation.
- (8) High temperature or humidity may deteriorate the performance of the open cell. Please store open cell in the specified storage conditions.
- (9) When ambient temperature is lower than 10 °C, the display quality might be deteriorated. For example, the response time will become slow.

8.2 Safety Precautions

- (1) If the liquid crystal material leaks from the panel, it should be kept away from the eyes or mouth. In case of contact with hands, skin or clothes, it has to be washed away thoroughly with soap.
- (2) After the open cell end of life, it is not harmful in case of normal operation and storage.